


Biometric Technology Provider

How to Connect MCP040(V2.0) with VSR20D via Wiegand


ACCESS CONTROL
TIME ATTENDANCE
MANAGEMENT
SOLUTIONS



Power Connector Connection

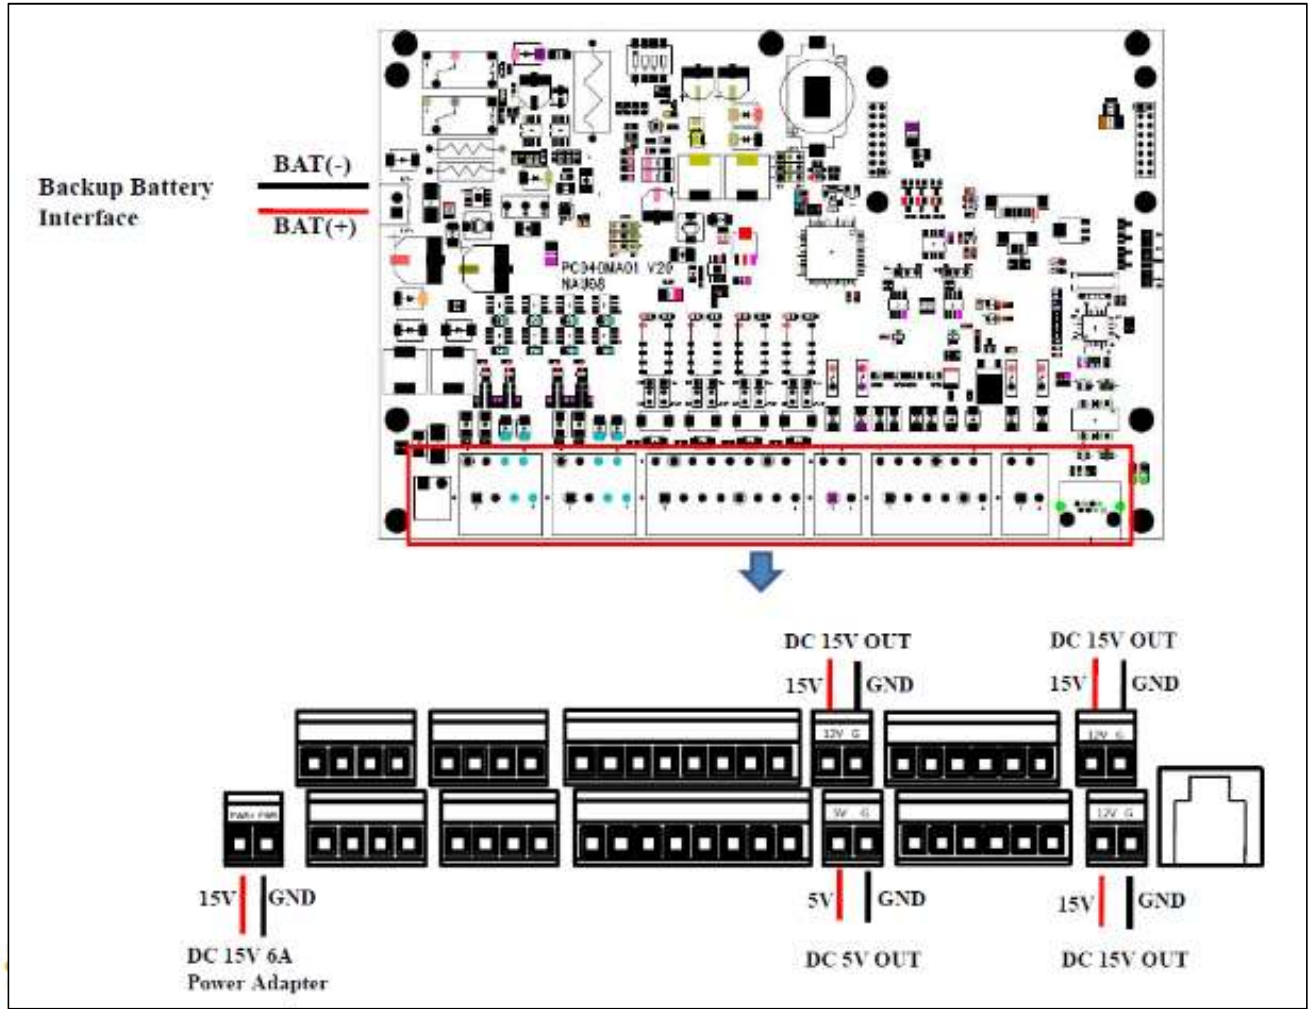


Mainboard Feature

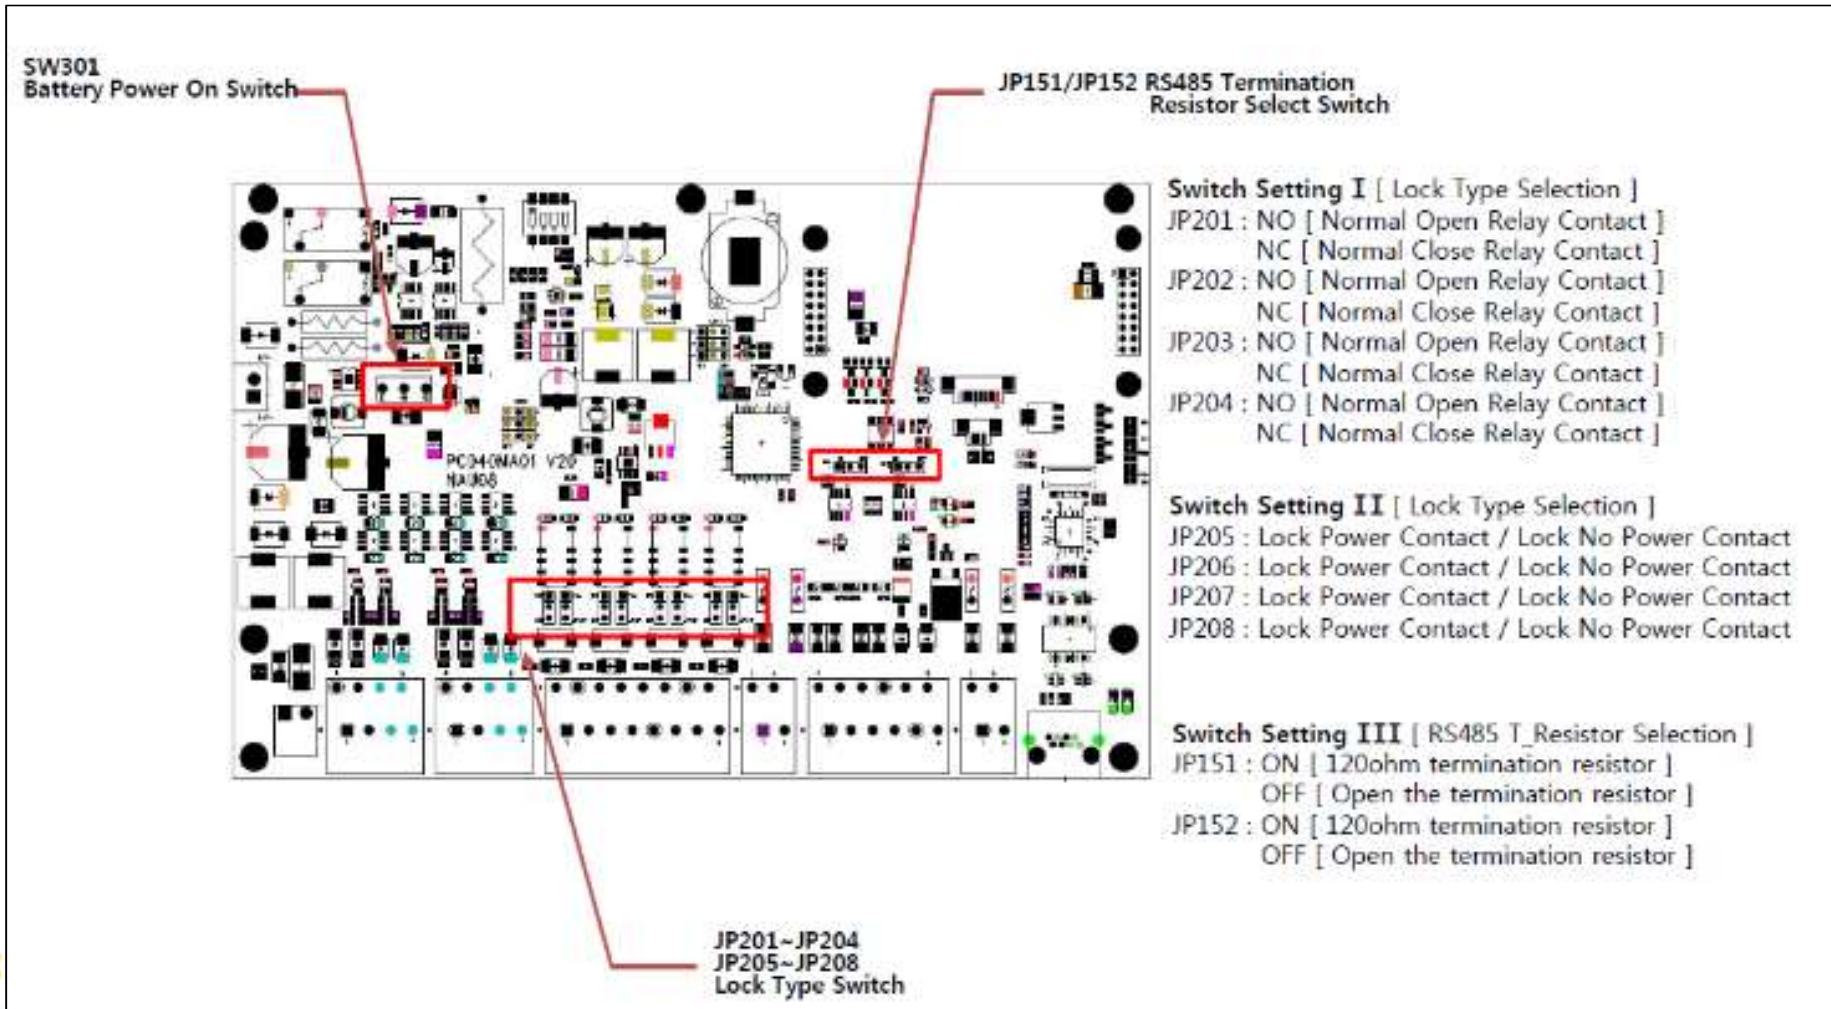




Connection of Wires in Terminal Blocks

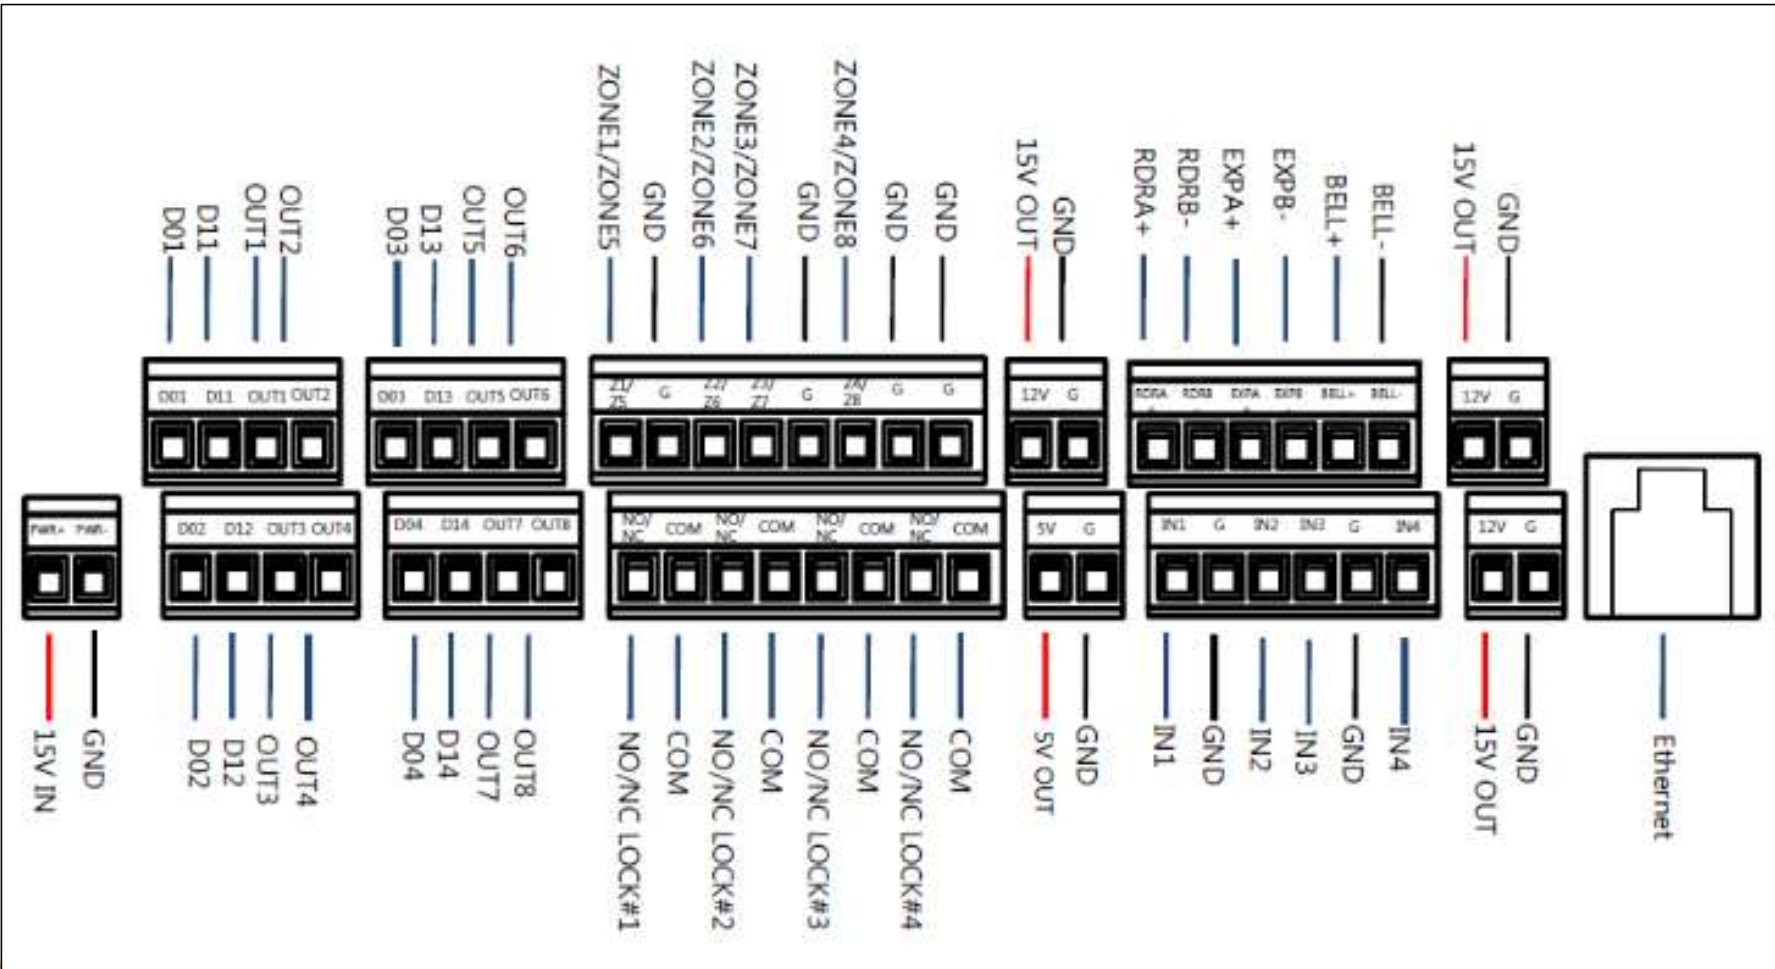



How to Set the internal switch on VSR20D to use Wiegand Reader

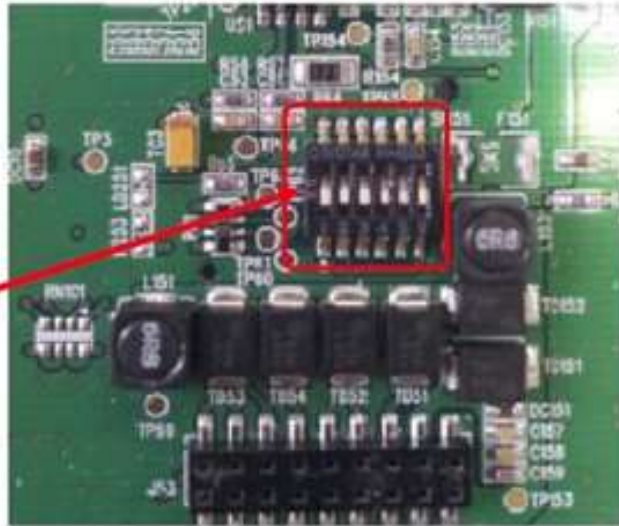

• Default all OFF [0]

Pin 4 should be ON for using the VSR20D as Wiegand reader

SW51 Select S/W Function

	1	2	3	4	5	6
Function	485 ID Select			Wiegand [1] RS485 [0]	Reserve	RS485 Termination Resistor

Installation guide for connecting MCP040 with VSR20D via Wiegand

